

SKU # 10765

1/2

## 2006 Chevy Trailblazer SS Upper Billet Grille (4pc) Installation Instructions

**Hardware Kit: (10) 1 ¼" Fully Threaded Studs  
(10) K-lock Nuts (10) Sm. Flat Brackets**

Step 1: Remove the factory grille shell from the core support. To do this you will need a flat screwdriver. Slide the screwdriver in between the metal clip, and the plastic, this will free the grille shell from the core support. See figure 1&2.



Figure 1

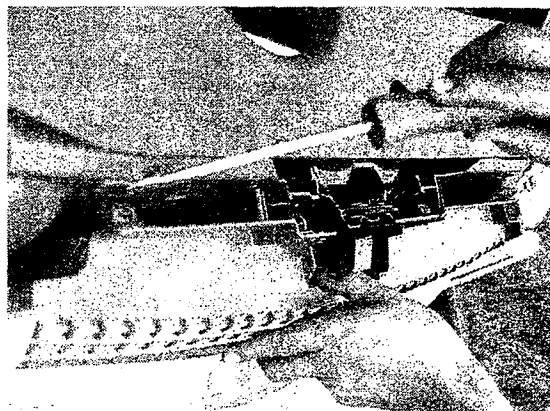


Figure 2

Step 2: Mask off the grille shell with a light adhesive tape, this will help protect the grille shell from being damaged during the install.

Step 3: Attach the fully threaded studs to the backside of the two main grilles pieces.

Step 4: Place each of the pieces into each of the sections. Center the grilles, then place the powder coated brackets over the fully threaded studs from the backside of the grille shell.

Step 5: Be sure that each of the grilles is centered into the pockets, and then secure using the K-lock nuts.

Step 6: Place each of the small wing billet pieces into the pockets in the bar of the grille shell.

Step 7: Once each of the wing pieces are centered and in place, use a small marking tool, and make a mark in the grille shell through the mounting tab. Once the marks have been made drill a hole slightly larger than the fully threaded stud. See figure 3.

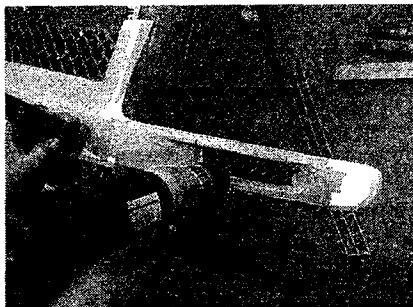


Figure 3

Step 8: Attach the remaining fully threaded studs onto the backside of the grilles. Place the grilles into the pockets.

Step 9: Center the wings, and then place the brackets over the studs from the backside of the grille shell. Secure using the K-lock nuts.

**Installation Is Now Complete!!!!**